



## Yukon Installation Instructions for IFS Spring



1. The installation of this carrier assembly does not require the reuse of the factory retaining clip (see above) and has been replaced by the provided axle retaining spring.



2. In order to install the retaining spring you will need to separate the two axle assemblies at the point indicated.



3. Install the retaining spring in between the slip yoke and the intermediate axle.



4. With the spring in place and the axle reassembled, install the axle shaft assembly.