



- 1. Front Companion Yoke, Nut, Washer & Seal
- 2. Detent Plug, Spring & Pin
- 3. Front Retainer & Seal
- 4. Front Case
- 5. Vacuum Switch & Seal
- 6. Vent Assembly
- 7. Input Gear Bearing & Snap Ring
- 8. Low Range Gear Snap Ring
- 9. Input Gear Retainer
- 10. Low Range Gear Thrust Washers
- 11. Input Gear
- 12. Input Gear Pilot Bearing
- 13. Low Range Gear
- 14. Range Fork Shift Hub
- 15. Synchronizer Hub Snap Ring
- 16. Synchronizer Hub Springs
- 17. Synchronizer Hub & Inserts
- 18. Synchronizer Sleeve
- 19. Synchronizer Stop Ring
- 20. Snap Ring
- 21. Output Shaft Front Bearing
- 22. Front Output Shaft

- 23. Drive Sprocket
- 24. Drive Chain
- 25. Drive Sprocket Bearings
- 26. Output Shaft Rear Bearing
- 27. Mainshaft
- 28. Oil Seal
- 29. Oil Pump Assembly
- 30. Rear Bearing
- 31. Snap Ring
- 32. Rear Case
- 33. Fill Plug
- 34. Drain Plug
- 35. Rear Retainer
- 36. Extension Housing
- 37. Bushing
- 38. Oil Seal
- 39. Oil Pick-Up Screen
- 40. Tube Connector
- 41. Oil Pick-Up Tube
- 42. "O" Ring
- 43. Magnet
- 44. Range Lever Nut & Washer
- 45. Range Lever
- 46. "O" Ring & Seal
- 47. Sector
- 48. Mode Spring
- 49. Mode Fork
- 50. Mode Fork Pads
- 51. Range Fork Pads
- 52. Range Fork Bushings
- 53. Range Fork

- 36. Extension Housing
- 37. Bushing
- 38. Oil Seal
- 39. Oil Pick-Up Screen
- 40. Tube Connector
- 41. Oil Pick-Up Tube
- 42. "O" Ring
- 43. Magnet
- 44. Range Lever Nut & Washer
- 45. Range Lever
- 46. "O" Ring & Seal
- 47. Sector
- 48. Mode Spring
- 49. Mode Fork
- 50. Mode Fork Pads
- 51. Range Fork Pads
- 52. Range Fork Bushings
- 53. Range Fork